 





## AXIS P5534 POE CAMERA CONFIGURATION FOR ES7510 AND ES7506 SWITCHES


1. Open the web interface of the camera and click the Setup link at the top right-hand corner of the page:



2. Click the System Options link on the left-hand side of the page:

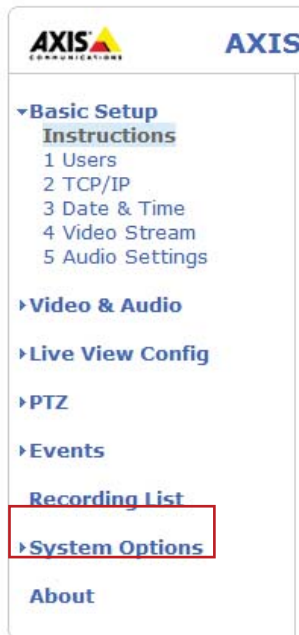


3. Click the Advanced link from the System Options submenu:

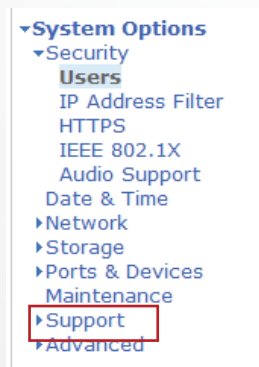



4. Click the Scripting link from the Advanced submenu:

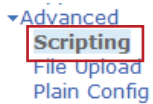

5. On the right-hand side of the page click the Open Script Editor button:

## Advanced Scripting

To modify your own scripts, click

6. A new window will open. Search for and click the link labeled init.d:

```
drwxr-xr-x  2 root    root          0 Oct  3 20:43 conf.d
-rw-r--r--  1 root    root          887 Mar 15 2011 axisstc.conf
-rw-r--r--  1 root    root          382 Sep  9 2008 event\_desc.list
drwxr-xr-x  2 root    root          0 Aug 14 2007 init.d
-rw-r--r--  1 root    root       1310 Oct  3 20:42 passwd
```

7. Search for and click the link labeled PoE:

```
-rwxr-xr-x  1 root    root       1812 Mar 15 2011 ntp
-rwxr-xr-x  1 root    root       1700 Mar 15 2011 poe
-rwxr-xr-x  1 root    root       2575 Mar 15 2011 ptz
```

8. Highlight and delete the contents of the script editor box, paste in the modified script, and click the Save File button.

10.30.0.3/admin-bin/editcgi.cgi?file=/etc/init.d/poe

File: /etc/init.d/poe Length: 1700 bytes [\[Select new file\]](#)

Save as:  Mode:

```
#!/bin/sh -e

. /etc/init.d/functions.sh

enable_motor_power() {
    setbits c3=0 ||
        error "Error enabling power pin: c3"
    setbits v4=0 ||
        error "Error enabling power pin: v4"
}

poe_detect() {
    local psef=/var/run/poe/pse_type b=

    [ -z "D0" ] ||
        b=$(readbits -a D0) ||
        error "Error while reading pin AT1"
    [ -z "" ] ||
        b=${b}${readbits -a } ||
        error "Error while reading pin ALT1"
```

### PRODUCT SUPPORT & SERVICE INFORMATION

Sales Support  
+1.763.494.4100  
sales@comtrol.com

Technical Support  
+1.763.494.4100  
www.comtrol.com/support

Email, FTP and Web Support  
info@comtrol.com  
ftp.comtrol.com  
www.comtrol.com